



GEAR BOX PARTS

GEAR BOX PARTS



Part No.
PI -M- 0096

OEM Numbers
343 267 0096

GEAR LEVER BOOT
(ROUND)



Part No.
PI -M- 0096

OEM Numbers
343 267 0096 -1

GEAR LEVER BOOT
(SQUARE)



Part No.
PI -M- 0184

OEM Numbers
361 266 0184

MOUNTING



Part No.
PI -M- 0003

OEM Numbers
346 266 0003

MOUNTING WITH PLATE



Part No.
PI -M- 0745

OEM Numbers
000 262 0745

FLANGE
150MM
16 HOLES – 12MM



Part No.
PI -M- 1045

OEM Numbers
000 262 1045

FLANGE
180MM
10 HOLES – 16MM

GEAR BOX PARTS

Part No.
PI -M- 0845

OEM Numbers
000 264 0845

FLANGE
165MM
8 HOLES – 16MM



Part No.
PI -M- 0945

OEM Numbers
000 264 0945

FLANGE
180MM
10 HOLES – 16MM



Part No.
PI -M- 1445

OEM Numbers
000 264 1445

FLANGE
165MM
8 HOLES – 14MM



Part No.
PI -M- 1454

OEM Numbers
000 264 1545

FLANGE
165MM
8 HOLES – 16MM



Part No.
PI -M- 3745

OEM Numbers
000 264 3745

FLANGE
180MM
10 HOLES – 16MM



Part No.
PI -M- 4145

OEM Numbers
000 264 4145

FLANGE
180MM
10 HOLES – 16MM



NOTE: Items listed in this catalogue are not original.
The only purpose of the O.E.M. references listed is to help our Customers in finding PARTS INTERNATIONAL part number

GEAR BOX PARTS



Part No.
PI -M- 3645

OEM Numbers
000 264 3645

FLANGE
180MM
4 HOLES – 15MM



Part No.
PI -M- 4245

OEM Numbers
000 264 4245

FLANGE
180MM
4 HOLES – 15MM



Part No.
PI -M- 2745

OEM Numbers
000 264 2745

FLANGE
180MM
10 HOLES - 16MM



Part No.
PI -M- 0844

OEM Numbers
000 264 0844

FLANGE
180MM
4 HOLES – 15MM



Part No.
PI -M- 0445

OEM Numbers
389 262 0445

FLANGE
180MM
4 HOLES – 15MM



Part No.
PI -M- 0645

OEM Numbers
389 262 0645

FLANGE
200MM
4 HOLES – 15MM

NOTE: Items listed in this catalogue are not original.
The only purpose of the O.E.M. references listed is to help our Customers in finding PARTS INTERNATIONAL part number

GEAR BOX PARTS

Part No.
PI -M- 0045

OEM Numbers
945 262 0045

FLANGE
180MM
4 HOLES – 15MM



Part No.
PI -M- 0245

OEM Numbers
945 262 0245

FLANGE
200MM
4 HOLES – 15MM



Part No.
PI -M- 0145

OEM Numbers
945 262 0145

FLANGE
180MM
4 HOLES – 15MM



Part No.
PI -M- 0945

OEM Numbers
389 262 0945

FLANGE
200MM
4 HOLES - 15MM



Part No.
PI -M- 9201

OEM Numbers
003 993 9201

SPRING



Part No.
PI -M- 0082

OEM Numbers
322 285 0082

RUBBER BUSH FOR TRANSFER CASE



NOTE: Items listed in this catalogue are not original.
The only purpose of the O.E.M. references listed is to help our Customers in finding PARTS INTERNATIONAL part number

GEAR BOX PARTS



Part No.
PI -M- 1386

OEM Numbers
312 280 1386

CLAMP FOR TRANSFER CASE RUBBER BUSH



Part No.
PI -M- 0174

OEM Numbers
343 285 0174

SHAFT FOR TRANSFER CASE



Part No.
PI -M- 2150

OEM Numbers
000 268 2150

BUSH



Part No.
PI -M- 0360

OEM Numbers
343 990 0360

RING NUT



Part No.
PI -M- 0545

OEM Numbers
000 990 2360

RING NUT



Part No.
PI -M- 0062

OEM Numbers
343 282 0545

FLANGE
150MM
8 HOLES - 12MM

GEAR BOX PARTS

Part No.

PI -M- 1303

SHIFT SHAFT

512MM

OEM Numbers

000 267 1303



Part No.

PI -M- 3574

GEAR SHIFT LOCKING PIN

OEM Numbers

000 268 3574



Part No.

PI -M- 1073

LOCK RING

OEM Numbers

000 262 1073



Part No.

PI -M- 1010

OIL PUMP SHAFT

210MM

OEM Numbers

947 269 1010



Part No.

PI -M- 1110

OIL PUMP SHAFT

235MM

OEM Numbers

947 269 1110



Part No.

PI -M- 1001

ALUMINIUM GEAR BOX OIL PUMP HOUSING

OEM Numbers

947 269 1001



NOTE: Items listed in this catalogue are not original.

The only purpose of the O.E.M. references listed is to help our Customers in finding PARTS INTERNATIONAL part number

GEAR BOX PARTS



Part No.
PI -M- 0201

OEM Numbers
945 269 0201

ALUMINIUM GEAR BOX OIL PUMP COVER



Part No.
PI -M- 0706

OEM Numbers
389 269 0706

ALUMINIUM GEAR BOX OIL PUMP DRIVEN GEAR



Part No.
PI -M- 1406

OEM Numbers
389 269 1406

ALUMINIUM GEAR BOX OIL PUMP DRIVING GEAR



Part No.
PI -M- 1360

OEM Numbers
000 990 1360

RING NUT



Part No.
PI -M- 2550

OEM Numbers
389 262 2550

GEAR BOX BUSH



Part No.
PI -M- 2222

OEM Numbers
000 267 2222

ALUMINIUM GEAR BOX COVER

GEAR BOX PARTS

Part No.

PI -M- 0932

ALUMINIUM GEAR BOX COVER

OEM Numbers

000 261 0932



Part No.

PI -M- 0728

ALUMINIUM GEAR BOX COVER

OEM Numbers

000 264 0728



Part No.

PI -M- 0162

CLAMPING BRACKET

OEM Numbers

000 260 0162



Part No.

PI -M- 0820

GEAR SHIFT HOUSING
(SHORT)

OEM Numbers

000 267 0820



Part No.

PI -M- 1020

GEAR SHIFT HOUSING
(LONG)

OEM Numbers

000 267 1020



Part No.

PI -M- 3701

GEAR SHIFT HOUSING

OEM Numbers

000 268 3701



NOTE: Items listed in this catalogue are not original.

The only purpose of the O.E.M. references listed is to help our Customers in finding PARTS INTERNATIONAL part number

GEAR BOX PARTS



Part No.
PI -M- 0519

OEM Numbers
000 267 0519

ALUMINIUM SPLITTER GROUP CYLINDER



Part No.
PI -M- 2119

OEM Numbers
000 267 2119

ALUMINIUM GEAR BOX RANGE CHANGE CYLINDER
90MM



Part No.
PI -M- 1119

OEM Numbers
945 267 1119

ALUMINIUM GEAR BOX RANGE CHANGE CYLINDER
90MM



Part No.
PI -M- 4055

OEM Numbers
1297 334 055

ALUMINIUM GEAR BOX RANGE CHANGE CYLINDER
100MM



Part No.
PI -M- 1319

OEM Numbers
945 267 1319

ALUMINIUM GEAR BOX RANGE CHANGE CYLINDER
- MPS



Part No.
PI -M- 1920

OEM Numbers
389 261 1920

GEAR BOX COVER

GEAR BOX PARTS



Part No.
PI -M- 0519

OEM Numbers
000 267 0519

ALUMINIUM SPLITTER GROUP CYLINDER



Part No.
PI -M- 2119

OEM Numbers
000 267 2119

ALUMINIUM GEAR BOX RANGE CHANGE CYLINDER
90MM



Part No.
PI -M- 1119

OEM Numbers
945 267 1119

ALUMINIUM GEAR BOX RANGE CHANGE CYLINDER
90MM



Part No.
PI -M- 4055

OEM Numbers
1297 334 055

ALUMINIUM GEAR BOX RANGE CHANGE CYLINDER
100MM



Part No.
PI -M- 1319

OEM Numbers
945 267 1319

ALUMINIUM GEAR BOX RANGE CHANGE CYLINDER
- MPS



Part No.
PI -M- 1920

OEM Numbers
389 261 1920

GEAR BOX COVER

GEAR BOX PARTS

Part No.

PI -M- 0420

GEAR BOX COVER

OEM Numbers

930 261 0420



Part No.

PI -M- 1033

OIL PUMP COVER

OEM Numbers

945 261 1033



Part No.

PI -M- 2433

P.T.O. ALUMINIUM COVER
WITH HUB 4MM

OEM Numbers

389 261 2433



Part No.

PI -M- 2333

P.T.O. ALUMINIUM COVER
WITH HUB 22MM

OEM Numbers

389 261 2333



Part No.

PI -M- 0089

GEAR SHIFTING COUPLING

OEM Numbers

389 268 0089



Part No.

PI -M- 2622

GEAR BOX COVER

OEM Numbers

000 267 2622



NOTE: Items listed in this catalogue are not original.

The only purpose of the O.E.M. references listed is to help our Customers in finding PARTS INTERNATIONAL part number

GEAR BOX PARTS



Part No.
PI -M- 1118

OEM Numbers
945 261 1118

GEAR BOX DRIVE SHAFT COVER



Part No.
PI -M- 4518

OEM Numbers
389 261 4518

GEAR BOX DRIVE SHAFT COVER



Part No.
PI -M- 0715

OEM Numbers
389 268 0715

MPS SHIFTING LEVER WITH PIN



Part No.
PI -M- 0230

OEM Numbers
389 265 0230

GEAR BOX SELECTOR LEVER



Part No.
PI -M- 0845

OEM Numbers
346 350 0845

FLANGE
165 mm
8 holes – 16 mm



Part No.
PI -M- 0645

OEM Numbers
346 350 0645

FLANGE
165 mm
8 holes – 14 mm

GEAR BOX PARTS



Part No.
PI -M- 1118

OEM Numbers
945 261 1118

GEAR BOX DRIVE SHAFT COVER



Part No.
PI -M- 4518

OEM Numbers
389 261 4518

GEAR BOX DRIVE SHAFT COVER



Part No.
PI -M- 0715

OEM Numbers
389 268 0715

MPS SHIFTING LEVER WITH PIN



Part No.
PI -M- 0230

OEM Numbers
389 265 0230

GEAR BOX SELECTOR LEVER



Part No.
PI -M- 0845

OEM Numbers
346 350 0845

FLANGE
165 mm
8 holes – 16 mm



Part No.
PI -M- 0645

OEM Numbers
346 350 0645

FLANGE
165 mm
8 holes – 14 mm

GEAR BOX PARTS

Part No.
PI -M- 0545

OEM Numbers
346 350 0545

FLANGE
180 mm
10 holes – 16 mm



Part No.
PI -M- 0045

OEM Numbers
366 353 0045

FLANGE
165 mm
8 holes – 14 mm



Part No.
PI -M- 0745

OEM Numbers
355 350 0745

FLANGE
180 mm
10 holes – 16 mm



Part No.
PI -M- 0645

OEM Numbers
355 350 0645

FLANGE
165 mm
8 holes – 16 mm



Part No.
PI -M- 1245

OEM Numbers
355 353 1245

FLANGE
180 mm
10 holes – 16 mm



Part No.
PI -M- 1445

OEM Numbers
355 353 1445

FLANGE
165 mm
8 holes – 16 mm



NOTE: Items listed in this catalogue are not original.
The only purpose of the O.E.M. references listed is to help our Customers in finding PARTS INTERNATIONAL part number

GEAR BOX PARTS



Part No.
PI -M- 0045

OEM Numbers
942 350 0045

FLANGE
180 mm
4 holes – 15 mm



Part No.
PI -M- 1545

OEM Numbers
346 350 1545

FLANGE
165 mm
4 holes – 13 mm



Part No.
PI -M- 2345

OEM Numbers
355 353 2345

FLANGE
180 mm
4 holes – 15 mm



Part No.
PI -M- 2445

OEM Numbers
355 353 2445

FLANGE
165 mm
4 holes – 13 mm



Part No.
PI -M- 1245

OEM Numbers
355 350 1245

FLANGE
180 mm
4 holes – 15 mm



Part No.
PI -M- 0645

OEM Numbers
942 353 0645

FLANGE
180 mm
4 holes – 15 mm

GEAR BOX PARTS



Part No.
PI -M- 0045

OEM Numbers
942 350 0045

FLANGE
180 mm
4 holes – 15 mm



Part No.
PI -M- 1545

OEM Numbers
346 350 1545

FLANGE
165 mm
4 holes – 13 mm



Part No.
PI -M- 2345

OEM Numbers
355 353 2345

FLANGE
180 mm
4 holes – 15 mm



Part No.
PI -M- 2445

OEM Numbers
355 353 2445


FLANGE
165 mm
4 holes – 13 mm



Part No.
PI -M- 1245

OEM Numbers
355 350 1245

FLANGE
180 mm
4 holes – 15 mm

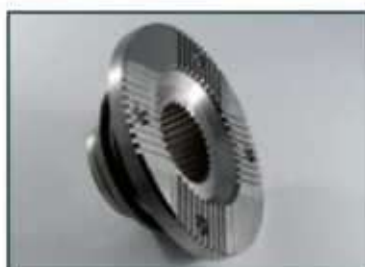

Part No.
PI -M- 0645

OEM Numbers
942 353 0645

FLANGE
180 mm
4 holes – 15 mm

NOTE: Items listed in this catalogue are not original.
The only purpose of the O.E.M. references listed is to help our Customers in finding PARTS INTERNATIONAL part number

GEAR BOX PARTS

Part No.
PI -M- 0145

OEM Numbers
942 350 0145

FLANGE
165 mm
4 Holes – 13 mm



Part No.
PI -M- 1245

OEM Numbers
942 353 1245

FLANGE
200 mm
4 Holes - 15 mm



Part No.
PI -M- 0145

OEM Numbers
946 350 0145

FLANGE
180 mm
4 holes – 15 mm



Part No.
PI -M- 1545

OEM Numbers
942 350 1545

DIFFERENTIAL FLANGE 180 mm KIT



Part No.
PI -M- 1645

OEM Numbers
942 350 1645

DIFFERENTIAL FLANGE 200 mm KIT



Part No.
PI -M- 0188

OEM Numbers
942 351 0188

PLATE for FLANGES



NOTE: Items listed in this catalogue are not original.
The only purpose of the O.E.M. references listed is to help our Customers in finding PARTS INTERNATIONAL part number

GEAR BOX PARTS



Part No.
PI -M- 0909

OEM Numbers
346 354 0909

OUTER GEAR
h 40 mm – 57T



Part No.
PI -M- 1109

OEM Numbers
346 354 1109

OUTER GEAR
h 66 mm – 57T



Part No.
PI -M- 3009

OEM Numbers
346 354 3009

OUTER GEAR
h 66 mm – 57T
(milled)



Part No.
PI -M- 3109

OEM Numbers
346 354 3109

OUTER GEAR
h 40 mm – 57T
(milled)



Part No.
PI -M- 2409

OEM Numbers
346 354 2409

OUTER GEAR
h 28 mm – 48T



Part No.
PI -M- 2309

OEM Numbers
346 354 2309

OUTER GEAR
h 54 mm – 48T

GEAR BOX PARTS

Part No.

PI -M- 2809

OUTER GEAR
h 28 mm – 48T
(milled)

OEM Numbers

346 354 2809



Part No.

PI -M- 2709

OUTER GEAR
h 54 mm – 48T
(milled)

OEM Numbers

346 354 2709



Part No.

PI -M- 4309

OUTER GEAR
h 40 mm – 89T
(milled)

OEM Numbers

346 354 4309



Part No.

PI -M- 4209

OUTER GEAR
h 66 mm – 89T
(milled)

OEM Numbers

346 354 4209



Part No.

PI -M- 5709

OUTER GEAR
h 66 mm – 85T
(milled)

OEM Numbers

346 354 5709



Part No.

PI -M- 1009

OUTER GEAR
h 66 mm – 56T

OEM Numbers

346 354 1009



NOTE: Items listed in this catalogue are not original.

The only purpose of the O.E.M. references listed is to help our Customers in finding PARTS INTERNATIONAL part number

GEAR BOX PARTS



Part No.
PI -M- 0709

OEM Numbers
355 354 0709

OUTER GEAR
h 40 mm – 56T



Part No.
PI -M- 1909

OEM Numbers
355 354 1909

OUTER GEAR
h 66 mm – 56T
(milled)



Part No.
PI -M- 1809

OEM Numbers
355 354 1809

OUTER GEAR
h 40 mm – 56T
(milled)



Part No.
PI -M- 5009

OEM Numbers
346 354 5009

OUTER GEAR
h 54 mm – 79T
(milled)



Part No.
PI -M- 5109

OEM Numbers
346 354 5109

OUTER GEAR
h 28 mm – 79T
(milled)



Part No.
PI -M- 45809

OEM Numbers
346 354 5809

OUTER GEAR
h 40 mm – 85T
(milled)

NOTE: Items listed in this catalogue are not original.
The only purpose of the O.E.M. references listed is to help our Customers in finding PARTS INTERNATIONAL part number

GEAR BOX PARTS

Part No.

PI -M- 2409

OUTER GEAR
h 66 mm – 86T
(milled)

OEM Numbers

355 354 2409



Part No.

PI -M- 9609

OUTER GEAR
h 45 mm – 85T
(milled)

OEM Numbers

346 354 9609



Part No.

PI -M- 9709

OUTER GEAR
h 45 mm – 75T
(milled)

OEM Numbers

346 354 9709



Part No.

PI -M- 2433

SIDE SHAFT NUT

OEM Numbers

674 356 0226



Part No.

PI -M- 1415

THRUST RING

OEM Numbers

346 356 1415



Part No.

PI -M- 1215

THRUST RING

OEM Numbers

355 356 1215



NOTE: Items listed in this catalogue are not original.

The only purpose of the O.E.M. references listed is to help our Customers in finding PARTS INTERNATIONAL part number

GEAR BOX PARTS



Part No.
PI -M- 0015
THRUST RING

OEM Numbers
946 356 0015



Part No.
PI -M- 0072
NUT

OEM Numbers
346 353 0072



Part No.
PI -M- 4518
BUSH

OEM Numbers
346 353 0450



Part No.
PI -M- 1050
BUSH

OEM Numbers
346.353.1050



Part No.
PI -M- 0150
BUSH

OEM Numbers
355 353 0150



Part No.
PI -M- 0250
BUSH

OEM Numbers
355 353 0250

GEAR BOX PARTS

OEM Numbers PI -M- 0950 BUSH	Part No. 346 353 0950	
OEM Numbers PI -M- 0950-1 BUSHES & THRUST WASHERS REPAIR KIT	Part No. 346 353 0950-1	
OEM Numbers PI -M- 0750 BUSH	Part No. 355 353 0750	
OEM Numbers PI -M- 4048 O-RING 255 x 5	Part No. 016 997 4048	
OEM Numbers PI -M- 0128 BUSH FOR SPIDER	Part No. 346 350 0128	
OEM Numbers PI -M- 0128 BUSH FOR SPIDER	Part No. 355 350 0128	

NOTE: Items listed in this catalogue are not original. The only purpose of the O.E.M. references listed is to help our Customers in finding PARTS INTERNATIONAL part number

GEAR BOX PARTS



Part No.
PI -M- 0050

OEM Numbers
659 353 0050

BUSH



Part No.
PI -M- 0062

OEM Numbers
948 353 0062

THRUST WASHER
87 x 134/1



Part No.
PI -M- 0062

OEM Numbers
946 353 0062

THRUST WASHER
87 x 150



Part No.
PI -M- 0123

OEM Numbers
948 350 0123

KIT SHAFT



Part No.
PI -M- 0026

OEM Numbers
942 356 0026

RING NUT



Part No.
PI -M- 0126

OEM Numbers
346 353 0126

RING NUT
(old version)

GEAR BOX PARTS

Part No.
PI -M- 0026

RING NUT

OEM Numbers
355 353 0026



Part No.
PI -M- 0126

RING NUT

OEM Numbers
355 353 0126



Part No.
PI -M- 5000

RING NUT

OEM Numbers
070852 055000



Part No.
PI -M- 0326

RING NUT
(new version)

OEM Numbers
346 353 0326



Part No.
PI -M- 0126

RING NUT

OEM Numbers
942 356 0126



Part No.
PI -M- 0925

GROOVED NUT

OEM Numbers
942 353 0925



NOTE: Items listed in this catalogue are not original.
The only purpose of the O.E.M. references listed is to help our Customers in finding PARTS INTERNATIONAL part number

GEAR BOX PARTS



Part No.
PI -M- 1025
GROOVED NUT

OEM Numbers
942 353 1025



Part No.
PI -M- 0025
GROOVED NUT

OEM Numbers
970 353 0025



Part No.
PI -M- 1246
OIL SEAL (new model)

OEM Numbers
014 997 1246



Part No.
PI -M- 0159
OIL SEAL (old model)

OEM Numbers
942 353 0159



Part No.
PI -M- 0008
COVER

OEM Numbers
942 351 0008



Part No.
PI -M- 0162
THRUST WASHER

OEM Numbers
304 334 0162

GEAR BOX PARTS

Part No.

PI -M- 0053

THREADED BUSH
(small)

OEM Numbers

320 357 0053



Part No.

PI -M- 0672

NUT

OEM Numbers

385 351 0672



Part No.

PI -M- 2551

SPACER RING

OEM Numbers

346 353 2551



Part No.

PI -M- 6051

SPACER RING

OEM Numbers

355 353 6051



Part No.

PI -M- 0151

SPACER RING

OEM Numbers

659 353 0151



Part No.

PI -M- 0572

NUT

OEM Numbers

385 351 0572



NOTE: Items listed in this catalogue are not original.

The only purpose of the O.E.M. references listed is to help our Customers in finding PARTS INTERNATIONAL part number

GEAR BOX PARTS



Part No.
PI -M- 0022

OEM Numbers
320 357 0022

BOOT
(closed)



Part No.
PI -M- 0102

OEM Numbers
335 357 0102

REAR AXLE SHAFT



Part No.
PI -M- 0701

OEM Numbers
658 357 0701

REAR AXLE SHAFT